

## How to...

Import Truck Templates into BrR

## 1. From the Bridge Explorer window, select the **BRIDGE EXPLORER** menu

BRIDO	ge explor	ER B	RIDGE FOI	DER	R	ATE	TOOLS	VIEW
Rate	9 Update	I I Rating	Recent Rating	Mana	ge Ai	] nalysi:	s Open	01 10 Precomputed Lc
Rate	Ratings BrM	Results	Results Result	E S	vent	S	Route Routing	Data Rating To
	Favorites Recent B	Folder ridges				BID	I	Bridge ID
- MI Bridges					►	1	TrainingBridge1	
🖽 🃁 Sample Bridges					2	TrainingBridge2		
📁	Deleted I	sridges				3	TrainingBri	dge3
						4	PCITraining	gBridge1
							DOIT	

## 2. Select Import

$\bigotimes$	□ Database information □		
Preferences	Connected	Yes	
	Build date	Feb 23 2022	
Database information	Version	7.2.0.3001	
Export	BrM and BrDR share this database	No	
Import	Database connection and driver info	ormation	
📮 Print	DataSource name localhost	Driver n	
-	Database name AASHTOWareBr7	2s Driver ve	
Help	DBMS name SQL Server Datab	base DBMS v	
🔀 Exit			

3. Navigate to the location on your computer where the template is saved, select the template to import and click **Open** 

System Data Import						
> • † 🖡	↑ 📜 > OneDrive - State of Michigan DTMB > Desktop			,O Search 7.X Analysis Templates		
Organize • New	v folder			ji • 💷 🌘		
Quick access Documents Downloads Desktop Load Rating C Load Rating	* * * * * *	Name UFR Overload.brsx UFR-DLbrsx UFRF Overload.brsx UFFR-DLbrsx	Type BRSX File BRSX File BRSX File BRSX File			
Fi	le name:	LFR-DL.brsx		System Data export file (*.brsx)     Open     Cancel		

4. Under *System Data Items* select the **Analysis Event Template** folder. To import all templates in the folder, click the double arrows. (Single arrows will import only highlighted template)

Click Import



5. From the Analysis Settings window, select **Open Template** to open an imported template

🔿 Design Review	Rating	Rating Method:	LFD
Analysis Type:			🔲 Save Analysis Results
Line Girger Lane/Impact Loading T	ype:		
As Requested	•	Apply Preference Setting:	None
Vehicles Output Engir	ne Description		
Vehicle Selection:	Traffic Direction: Both directions	▼ Refresh T Vehicle Sun	emporary Vehicles Advanced
Vehicles     Standard     Agency     User Defined     Temporary		Add to Rating	y Vehicles ventory perating agal Operating armit Inventory
		Remove from Analysis	rmit Uperating